




Inspiring Playful Learning.

LED Pebble 32cm

1668-LEDPEBBLE32CM

Operating Instructions

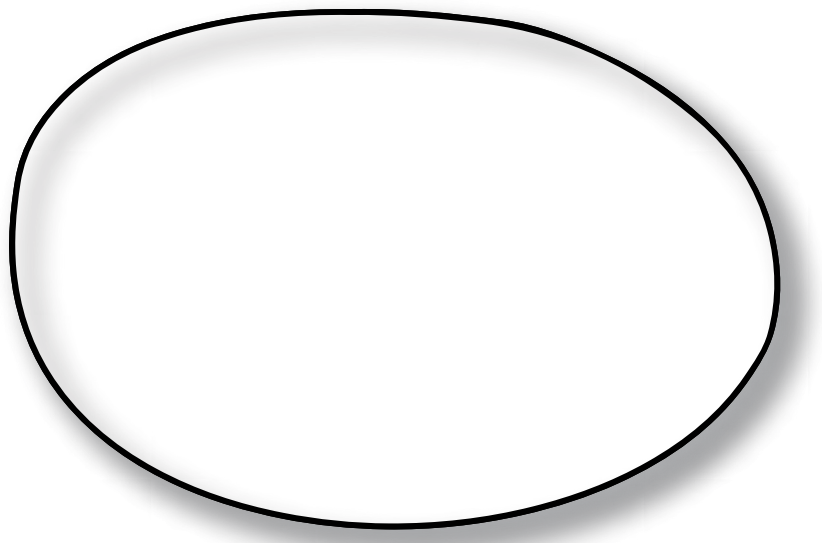

Suitable for ages 3+ years.
Made in China

Thankyou for purchasing our LED PEBBLE 32cm.

To ensure safe operation, please observe these operating instructions. These operating instructions are part of this product and contain important handling notes.

Light

1. Do not expose the LED unit to fire or high temperatures.
2. Do not attempt to disassemble the LED unit. Failure to comply will automatically void warranty.
3. Do not charge the LED unit with chargers other than the one supplied.
4. Do not submerge in water or expose to sunlight for an extended period.
5. To extend battery life ensure the first charge of the item is for 8 hours.
6. This product should not be used without adult supervision.


Charger

1. Do not use charger near a heat source or expose to fire.
2. Keep the charger out of reach of children.
3. Do not touch the charger while charging.
4. Do not try to open the charger casing. Please return any faulty chargers to the place of purchase.
5. Disconnect the charger after charging.
6. Do not use charger outdoors.
7. Charger is not waterproof.

Instructions For Use

1. Open the DC charger seal in the bottom panel and insert the adaptor plug into the exposed DC input socket for charging.
2. After charging, ensure you cover the seal again to protect it from dirt and moisture.
3. To turn on, press the ON/OFF button. This will start at the last mode which was previously selected.
4. To turn off, simply press the ON/OFF button.

Remote Control Functions

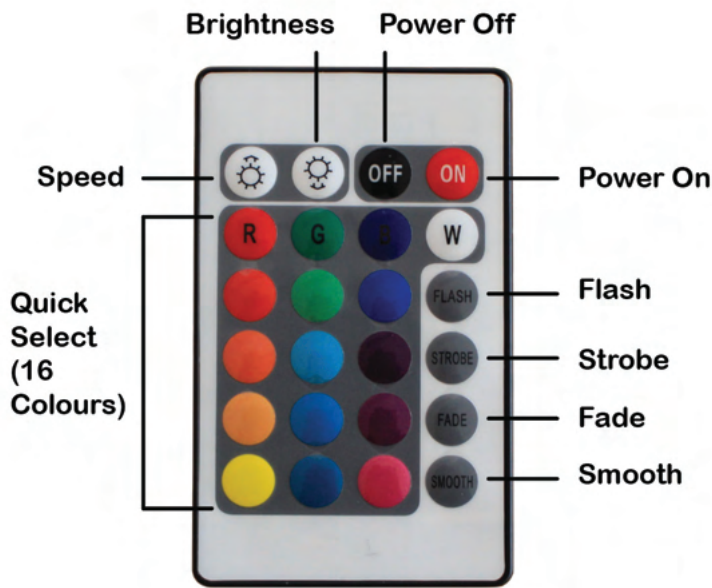

- Power ON in red and OFF in black.
- Brightness control (in static mode).
- Speed control (in flash, strobe, fade, smooth mode).
- Quick select of 16 static colours.
- Flash mode: flash 7 colours continuously.
- Strobe mode: blinking from white.
- Fade mode: blinking with 7 colours.
- Smooth mode: flow of full colour spectrum.
- Rechargeable with USB-C cable.

To activate the remote control pull the power separation film from the end of the unit.

Please note: the remote control is not waterproof and not intended for children.

For first use, flick the switch on the bottom to activate the remote's functions. If the unit has been out of use for some time, recharge the unit first then press the green (G) button on the remote for 12 seconds to reset the device to factory settings. Alternatively, charge it once a month to prolong the service life of the product.



Safety Guidelines

- Keep out of reach of children.
- The remote control is to be used by adults only and is **not** waterproof.

Maintenance and Cleaning

- Servicing or repair must only be carried out by a specialist or specialist workshop.
- This product contains no parts that require servicing by you. Therefore, never open the product's casing.
- A soft, dry and clean cloth is sufficient for cleaning the outside.
- Never use any abrasive cleaning agents, alcohol or other chemical solutions that would damage the casing (discolouration).

Safety Tested

EN 62115: 2005 + A2: 2011 + A11: 2012+A12: 2015 Electric toys + Safety Passed

